

Hyperion

Instructions Manual

glamm[®]
fire



Thank you for purchasing a GlammFire product.

In order to activate your 2-year GlammFire warranty, please register your GlammFire product at www.glammfire.com/pt/sobre/garantia or complete your warranty card and send it to us along with a purchase copy, to our address, within 30 days after the purchase.

For more information please Check the *Warranty* chapter.

INDEX

1-Material supplied.....4

2-Components.....5

3-Important safety information.....6

4-Installation.....8

5-Transportation.....13

6-Gas requirements.....13

7-Assembly.....14

8-Leak test.....14

9-Operating instructions.....15

10-Checklist of problems28

11-Failure codes list-APP.....30

12-Maintenance34

13-General dimensions36


14-Specifications37

15-After-Sales Service.....38

16-Warranty.....38


1-MATERIAL SUPPLIED

- 1—Deflector
- 2—Top part
- 3—Bottom part
- 4—Remote control and battery
- 5—Cinta
- 6—Tubular glass
- 7—4x cap nuts M6
- 8—9x M4 nuts
- 9—4x M8 screws
- 10—Protection grid
- 11— Heat diffuser
- 12—Locking ring

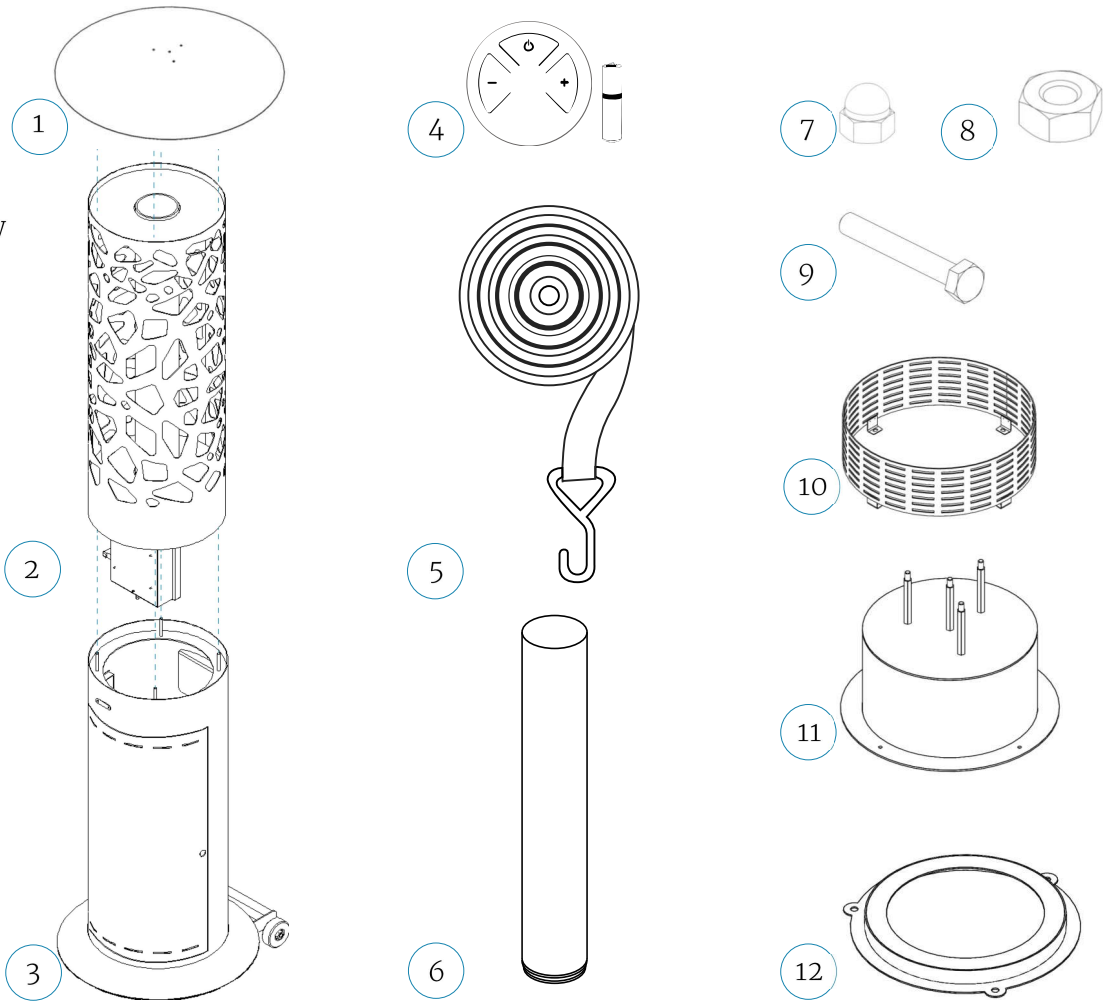

2-COMPONENTS

- Ignition assembly —1
- Receiver/ Battery operated option (DC)—2
- Valve—3
- Burner power connection—4
- Ceramic burner—5
- Lighter (Piezo)—6
- Pilot—7
- Thermocouple—8

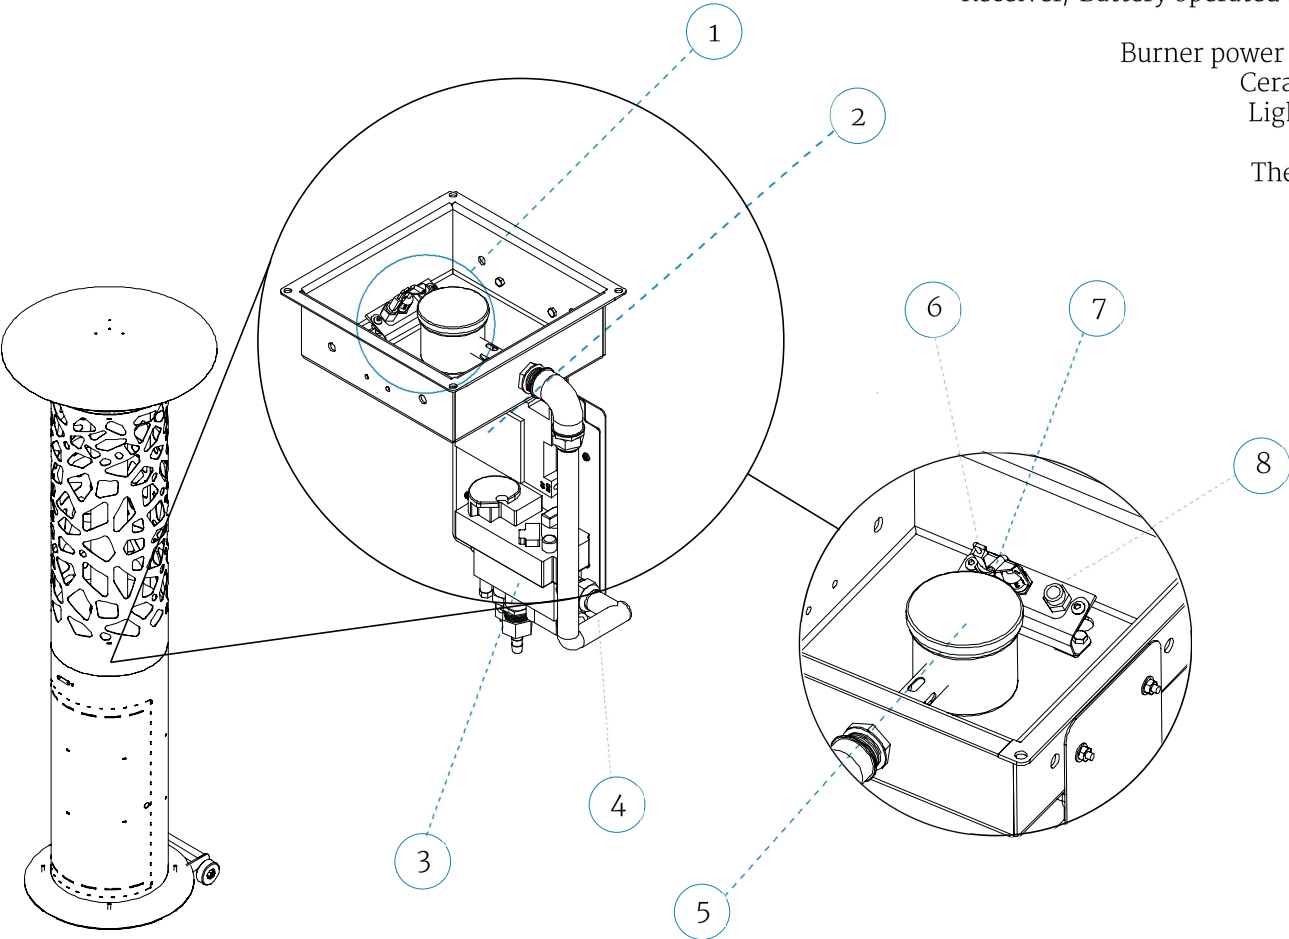

3-IMPORTANT SAFETY INFORMATION

PLEASE READ CAREFULLY THE FOLLOWING SAFETY GUIDELINES BEFORE OPERATION

Safety measures

If you smell gas:

- Shut off gas to the appliance.
 - Extinguish any open flame.
 - If odour continues, immediately call your gas supplier or your fire Department.
- Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

WARNING:

Do not use the heater inside, guarantee its use outdoors or in widely ventilated areas, to avoid physical or material damages.

An amply ventilated area must have a minimum of 25% of the surface area open.

The surface area is the sum of the walls surface.

This appliance must be installed and the gas cylinder stored in accordance with the regulations on force.

Do not obstruct ventilation holes of the cylinder housing.

Do not move the appliance in operation or after it has been switched off without cooling.

Shut off the valve at the gas cylinder or the regulator before moving the appliance.

The tubing or the flexible hose must be changed within the prescribed intervals.

Use only the type of gas and the type of cylinder specified by the manufacturer. The LP tank used with your patio heater must meet the following requirements. Purchase LP tanks only with these required measurements: 310 mm x 595 mm (diameter x height) with the maximum capacity of 13 kg of butane gas or 11 kg of propane gas (13 kg of propane gas in Austria, Germany, Switzerland and Luxembourg).

In case of violent wind particular attention must be taken against tilting of the appliance.

For a correct use of the appliance, the temperature of the surrounding environment must NOT be less than 0°C.

Do not install in vehicles or pleasure crafts.

Repairs should only be carried out by a qualified technician, using only original parts and always using the technical manual provided by GlammFire.

Improper installation, adjustment, alteration can cause personal injury or property damage.

Do not attempt to alter the unit on any manner.

Never replace or substitute the regulator with any regulator other than the factory-suggested replacement.

The whole gas system, hose, regulator, pilot or burner should be inspected for leaks or damage before use, and at least annually by a qualified service person.

All leak tests should be done with a soap solution. Never use an open flame to check for leaks.

Do not use the heater until all connections have been leak tested.

Turn off the gas valve immediately if smell of gas is detected.

- Turn cylinder valve OFF. If the leak is at the hose/regulator connection: tighten connection and perform another leak test. If bubbles continue appearing should be returned to hose's place of purchase.
- If the leak is at the Regulator/Cylinder valve connection: disconnect, reconnect; and perform another leak check. If you continue to see bubbles after several attempts, cylinder valve is defective and should be returned to cylinder's place of purchase.

Keep the ventilation opening of the cylinder enclosure free and clear of debris.

Do not paint the radiant screen. Control panel or top canopy reflector.

Control compartment, burner and circulation air passageways of the heater must be kept clean.

The LP tank should be disconnected when the heater is not in use.

Check the heater immediately if any of the following occurs:

- The heater does not reach temperature.
- The burner makes popping noise during use (a slight noise is normal when the burner is extinguished).
- Smell of gas conjunction with extreme yellow tipping of the burner flames.

The LP regulator/hose assembly must be located out of pathways where people may trip over it or in area where the hose will not be subject to accidental damage.

Any guard or other protective device removed for servicing the heater must be replaced before operating the heater.

Adults and children should stay from high temperature surface to avoid burns or clothing ignition.

Children should be carefully supervised when they are in the area of the heater.

Clothing or other flammable materials should not be hung on the heater or placed on near the heater.

To change the gas cylinder in a amply ventilated area, away from any ignition source (candle, cigarettes, other flame producing appliances; ...);

To check that the regulator seal is correctly fitted and able to fulfill its function showed as photo right;

If it shows signs of cracking, splitting or other deterioration it shall be exchanged for new hose of the same length and of the equivalent quality;

The use of this appliance in enclosed areas can be dangerous and is PROHIBITED;

Read the instructions before using this appliance. The appliance must be installed in accordance with the instructions and local regulations.

Keep instructions for later reference.


4—INSTALLATION

ATTENTION: All installation procedures must be carried out by a qualified technician.


Heater must be placed on level firm ground.

Make sure that the installation follows all local safety and construction norms and regulations.


WARNING: Improper installation, adjustment, alteration, repair or maintenance can cause injury or property damage. Please read the installation, operating and maintenance instructions carefully before installing or servicing this equipment.

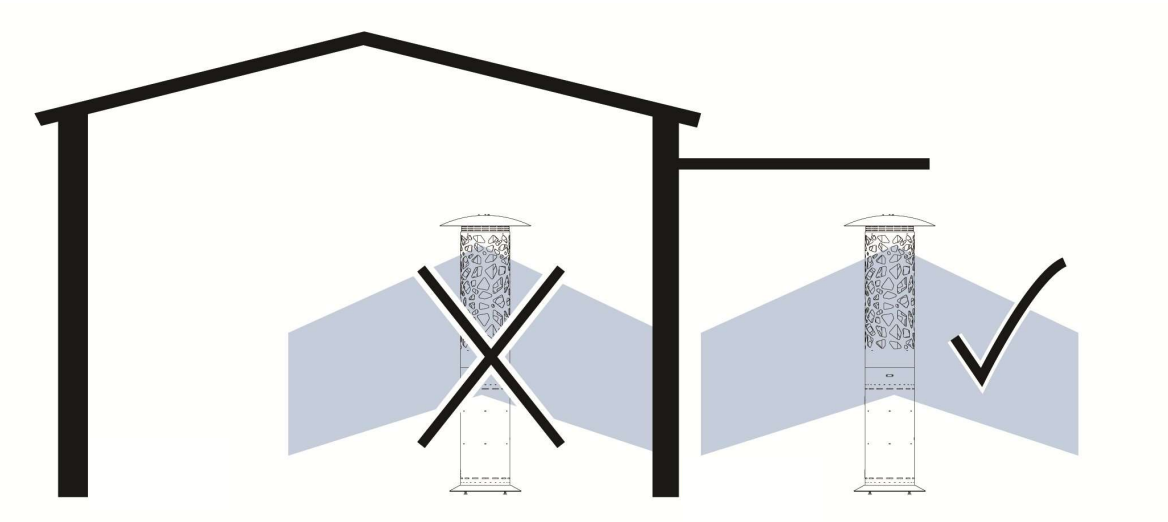


Heater Installation Locations

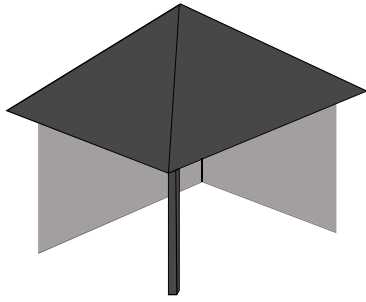


1. Outdoor installation without two adjacent walls.

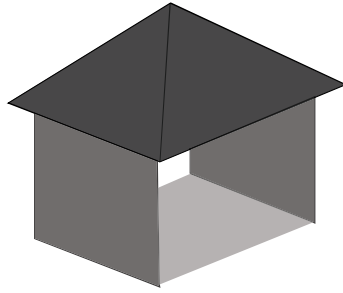

2. Outdoor installation without two opposite walls.

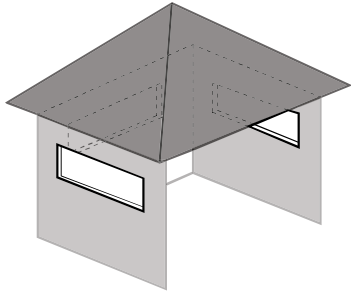


3. Outdoor installation with at least 25% open area.

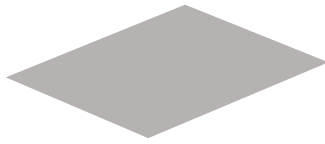

4. Outdoor installation.

Safety Distances

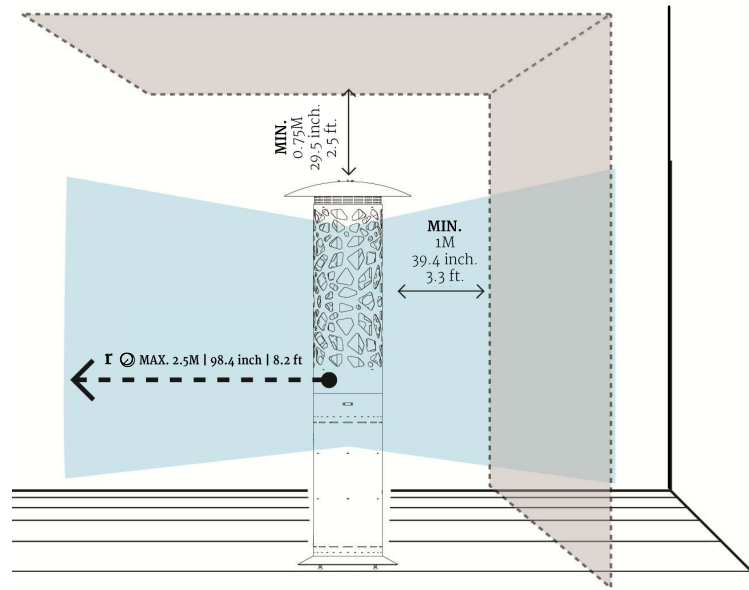

Keep a minimum distance of 1 meter to the side and at least 0.75 meters from the top.
The model heats up around within to a maximum radius of 2.5 meters.