


GRANDE



ASSEMBLY INSTRUCTIONS

06-07/2020




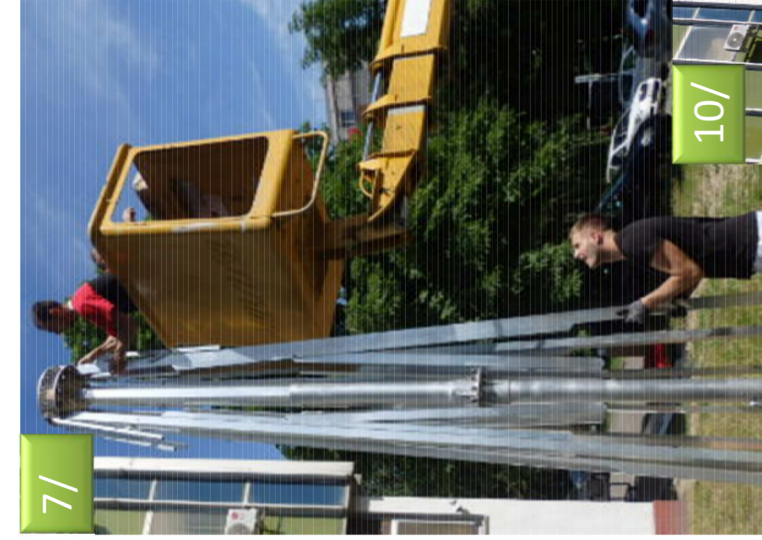

7/



8/

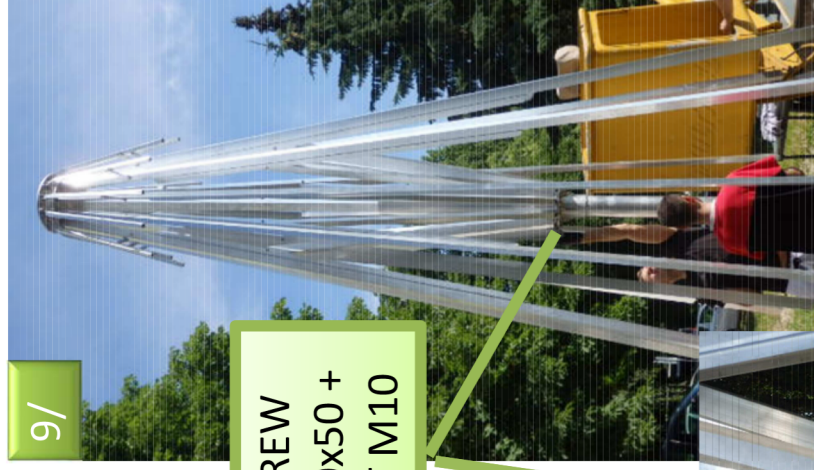


9/

SCREW
M10x50 +
NUT M10




10/

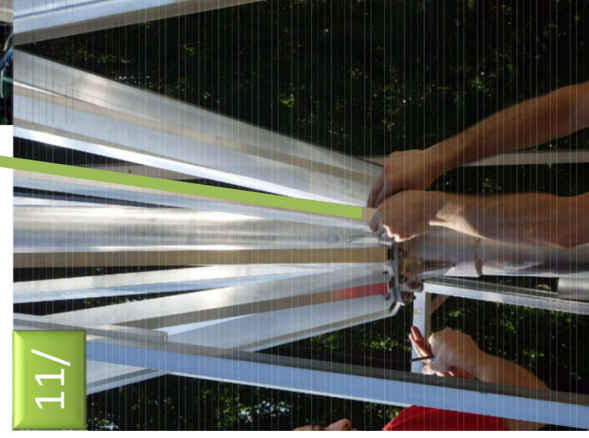

11/




12/

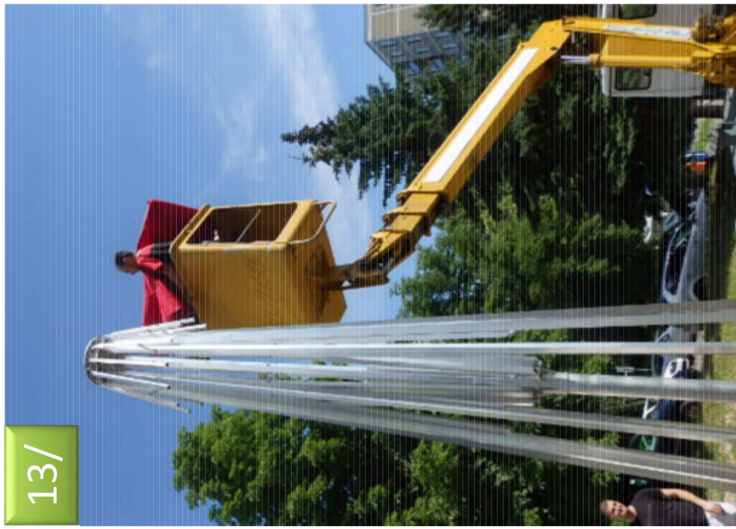

13/



14/

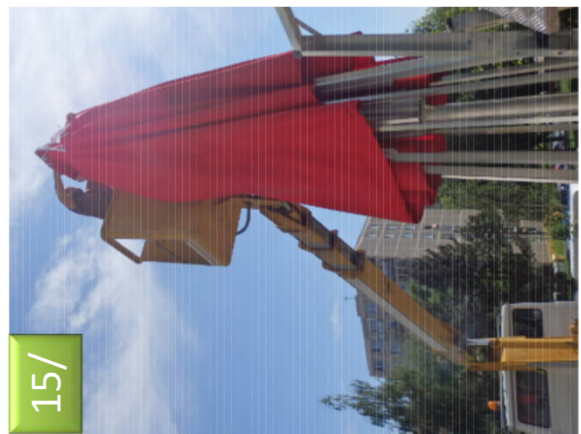



15/




16/






17/

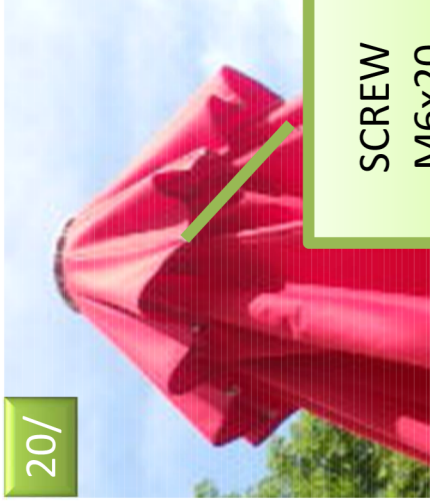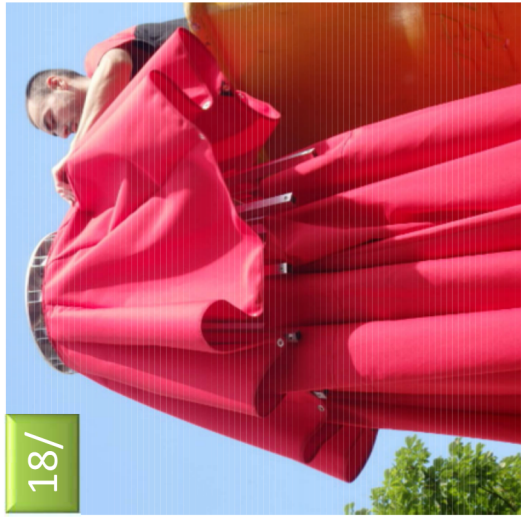

SCREW
M6x20

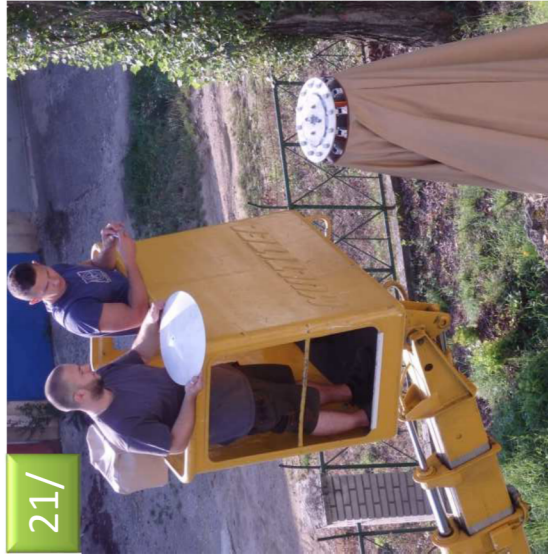

CAP WITH
BALL

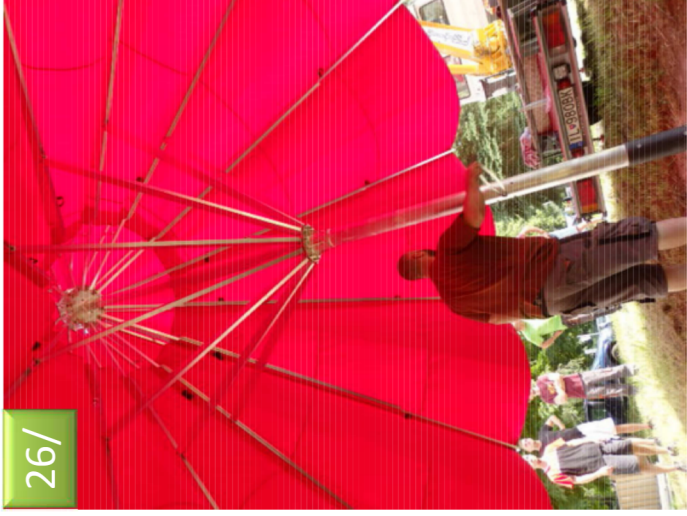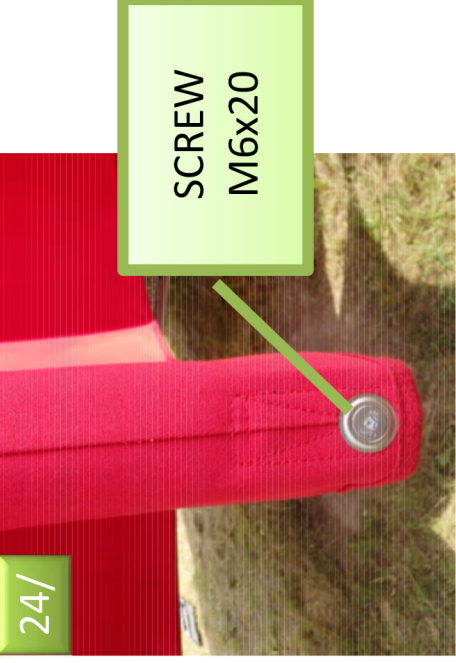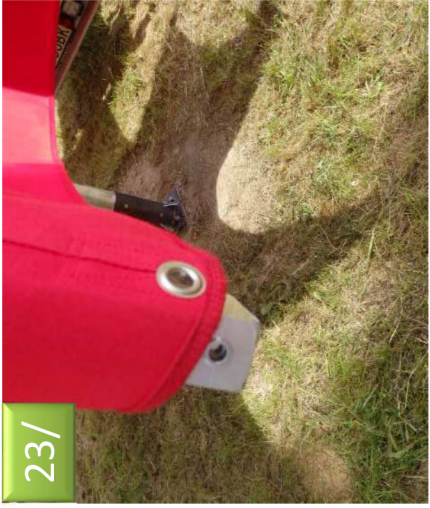

27/



FIX IT BY
VELCRO

28/



29/





FINISHED