

GlammFire

# Apollo Crea7ion.E



Fire Wonderland


Materials//

Apollo Crea7ion.E I/Rusted  
corten steel

Apollo Crea7ion.E II/Brushed  
stainless steel

Apollo Crea7ion.E III/Lacquered  
steel

OP// blue, black, white, red

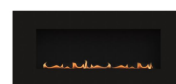

It is designed to emphasize the unique and continuous expressions of the flame. Crea7ion is an electronic system with an innovative technology, which stand out its simple design, practical functionality and low consumption. Its structure and solidity ensure a perfectly safe and linear flame, while its ecological character keeps a respecting commitment to the environment, contributing to a pleasant comfort and well-being.

Crea7ion can be integrated into virtually any environment or directly in different types of structures (eg.: furniture or masonry). A system totally safe for projects led by architects, decorators and interior designers.

Control the pleasure of your fire.

Dimensions// 650 h x 1450 w x 215 d mm

Weight// 92 kg

Accessories// - -

Ignition Mode// Electronic— Remote Control

Auxiliary power// Batteries AA (3x1,5V)

Power// 7,50 kW

Combustion fire line// 3 litres (liquid bioethanol)

Burning time// 3 litres/ 3h

/Automatic CO2 Detector included.

GlammFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL


Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire


GlammFire

# Apollo Crea7ion.E


## Material Supplied

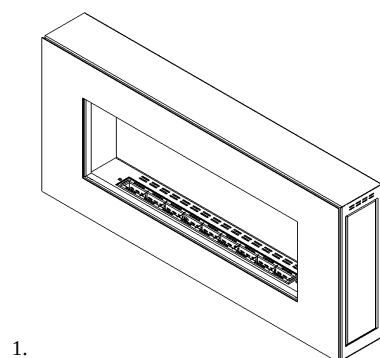


1. Model APOLLO CREATION
2. Mug;
3. Funnel;
4. Lighter;
5. Hex Key;

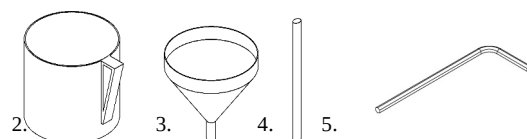

## Components

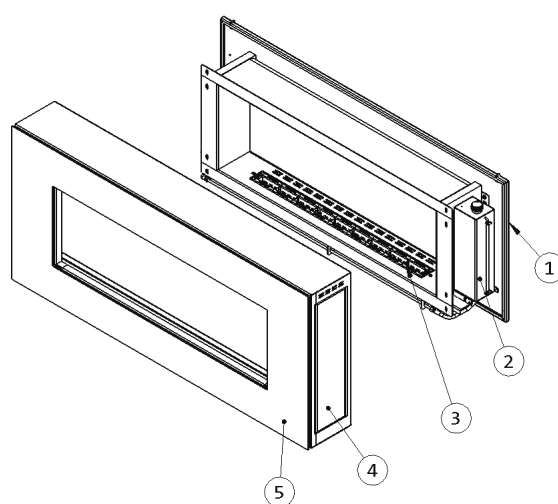

1. Wall fastening plate;
2. Tank;
3. Combustion fire line;
4. Access door to the tank;
5. Decorative rim;
6. Access door to the valve;
7. Control valve.

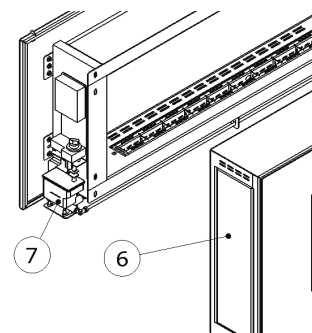

## GlammFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL

Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire

GlammFire

# Apollo Crea7ion.E

## Installation


In order to ensure a safety margin respect to the ground it is recommended to keep a minimum distance of 400 mm between the floor and the top of the burner;

The surface which you want to install the burner must be as level as possible;

### Dimensions:

To access to the control valve and tank will be necessary to ensure a distance between the fireplace and potential obstacles on lateral sides superior to 300 mm.

$A \geq 300 \text{ mm}$

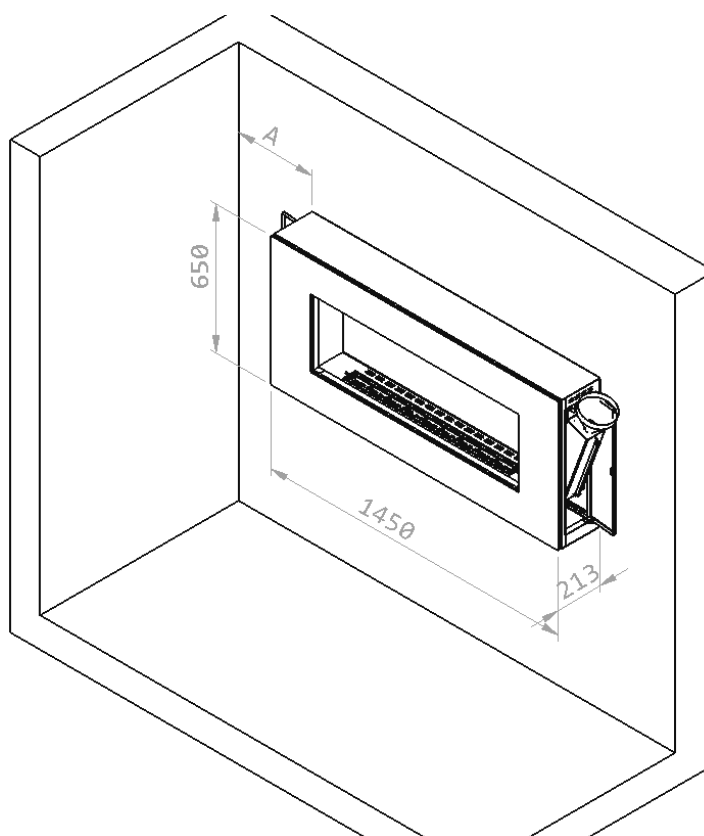

## GlammFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL

Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire

GlamFire

# Apollo Crea7ion.E

Flammable materials


- Do not place flammable materials near the fireplace, within 1m;
- Racks or shelves should be distant:
  - From fireplaces: 500 mm;
  - From burners: 1000 mm;

Materials: stone/metal/ceramics

- A - 150 mm;
- B - 100 mm;
- C - 500 mm;

Other non - flammable materials

- A - 200 mm;
- B - 250 mm;
- C - 600 mm;

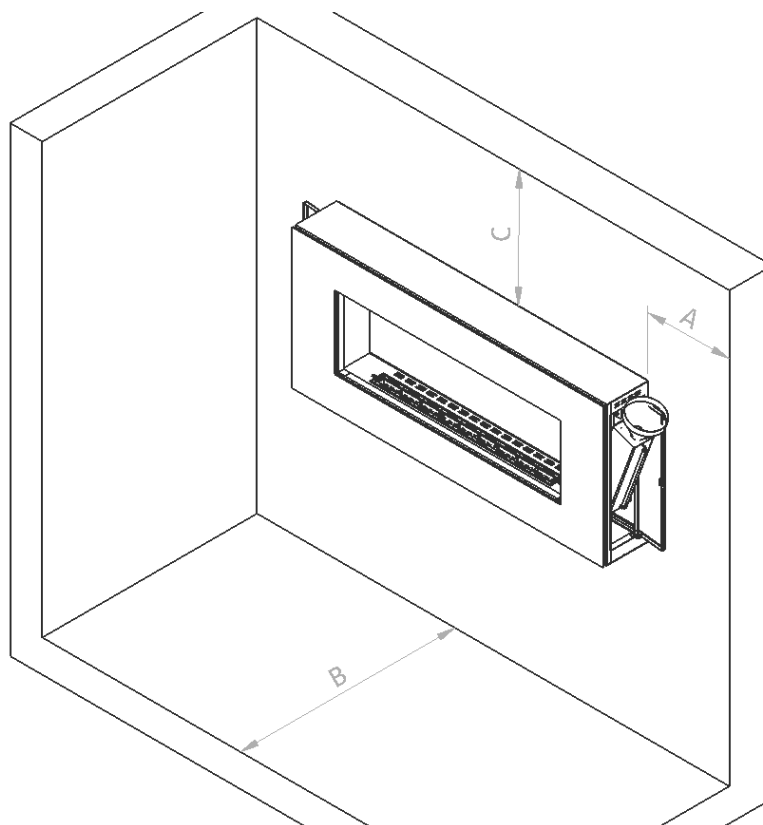

GlamFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL

Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire

GlaMMFire


# Apollo Crea7ion.E

## Installation Procedures

### Very Important:

We recommend extreme caution when unpacking your fireplace. The decorative rim is seated in the wall fastening plate, but it is loosened.

Separate the decorative rim to start the installation.

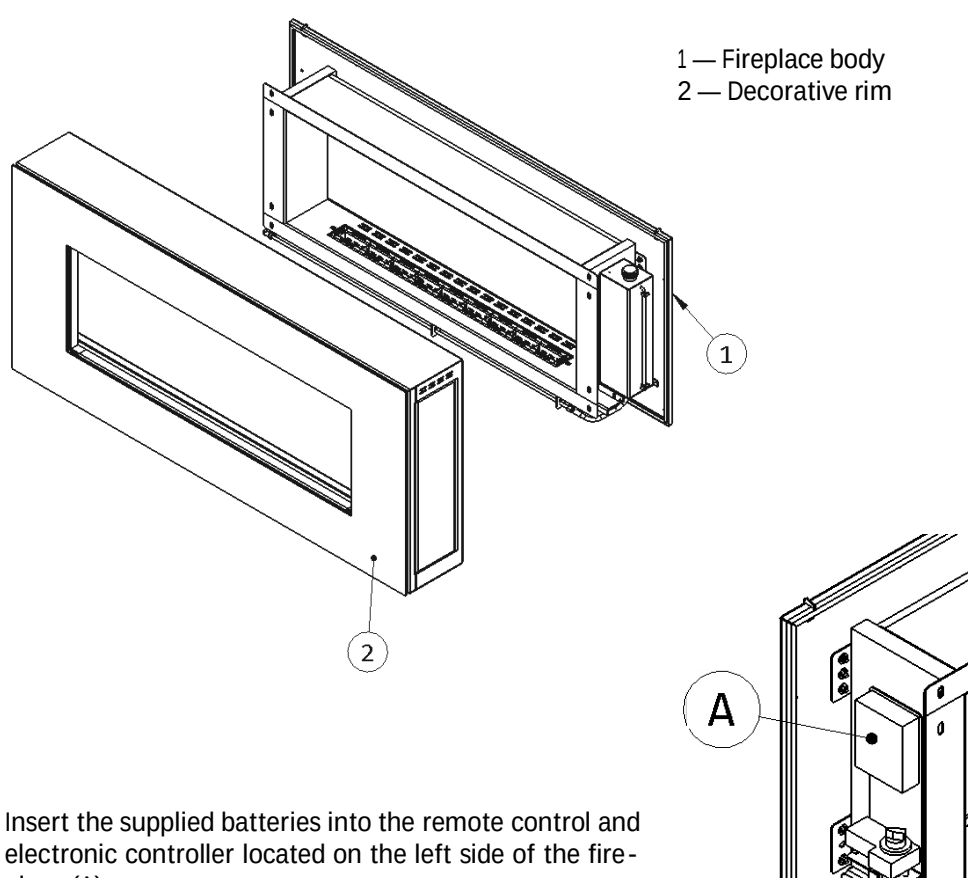

Insert the supplied batteries into the remote control and electronic controller located on the left side of the fireplace (A).

## GlaMMFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL

Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire


GlammFire

# Apollo Crea7ion.E


Place the fireplace in the desired location and mark the six holes required on the wall to install it.

Make sure your fireplace is level.

Choose the type of fastener suitable for the wall material and proceed to the drilling. Tighten the fireplace to the wall properly. Check the stability and levelling. Make adjustments if necessary.

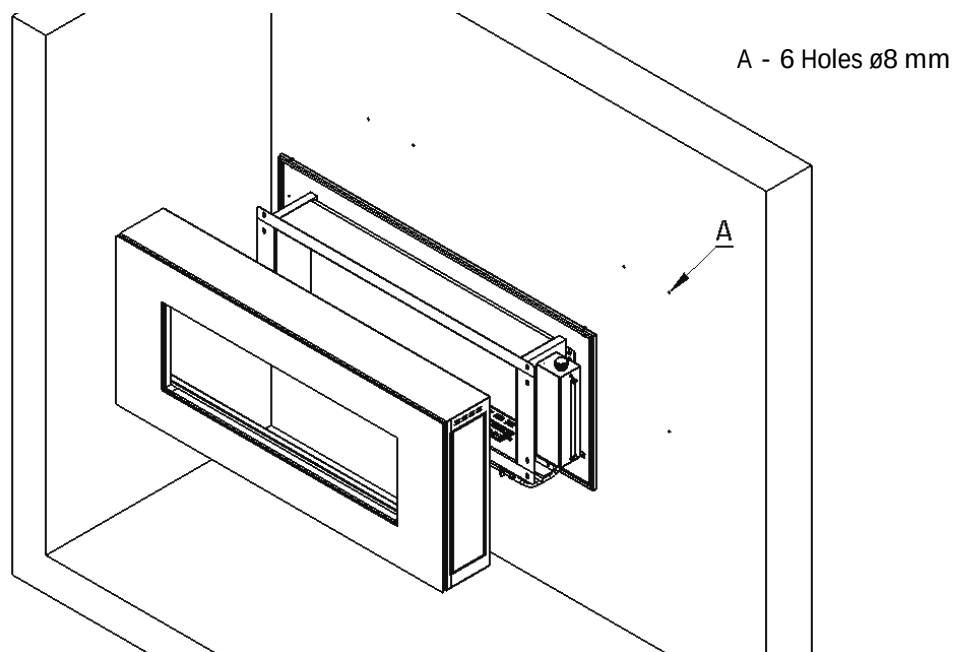

To complete the installation of your fireplace fit the decorative rim and tighten the nuts provided.

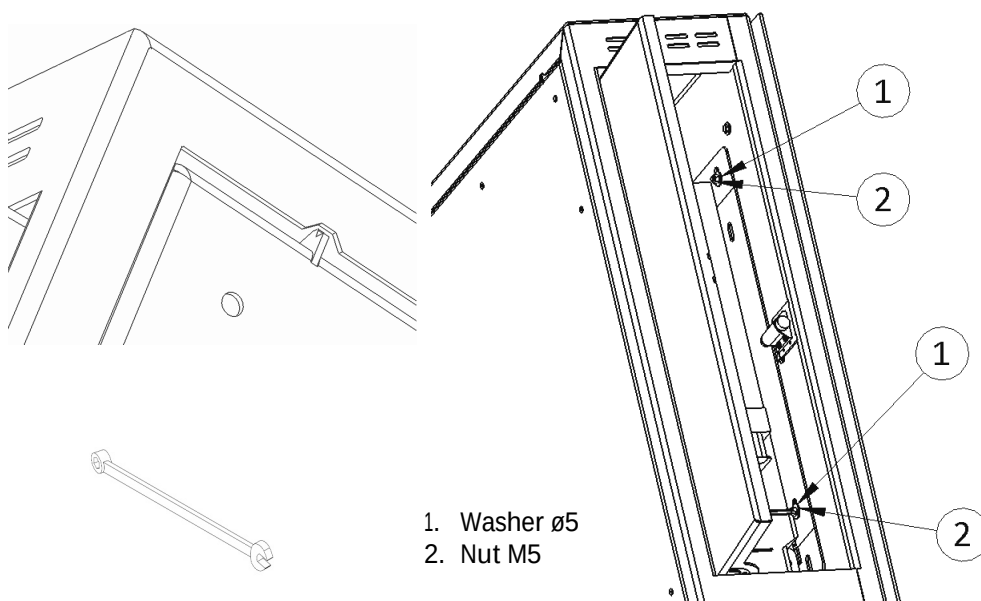

## GlammFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL

Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire

GlamFire

# Apollo Crea7ion.E

## Operation Instructions

- Access to the tank through the access door on the right side of the fireplace;
- Access to the deposit of bioethanol through the access door on the right side of the fireplace; With the help of the funnel and mug provided fill the desired amount of fuel (maximum: 3 litres). Check the filling level through the viewfinder;

- Light the fireplace: Press A + B simultaneously  
After a few seconds will be issue multiple beeps and then it will happen a discharge that will cause the deflagration of the flame. If the deflagration does not occur, make another attempt.

If bioethanol is too cold it will be necessary to light using the lighter supplied.

For security reasons it is not possible to light the fireplace when combustion fire line is hot, you will need to wait about 20 to 30 minutes.

- Flame regulation: **A** to increase, **C** to decrease.

- Switch off: Press B

After cutting flame may remain small residual flames at the point of fuel inlet for approximately 2 to 10 minutes. At the end of that time the flame becomes extinct completely.


- Levelling of Burner

If the flame does not occupy the entire opening will be necessary to level the burner.

Lack of flame on the left: Turn the screw clockwise to clockwise. Parallel turn the screw counter clockwise.

Lack of flame on the right side: Turn the screw clockwise to clockwise. Parallel turn the right screw counter clockwise.



Repeat the procedure described till to get a uniform flame.

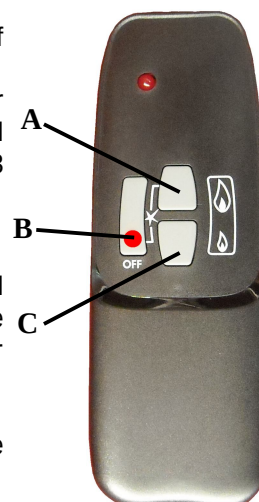

## GlamFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL


Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

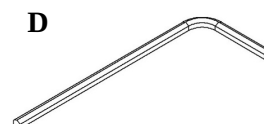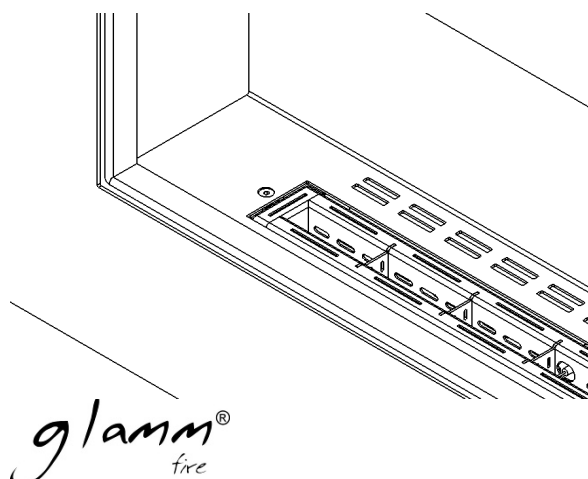

GlaammFire

# Apollo Crea7ion.E

Overall dimensions

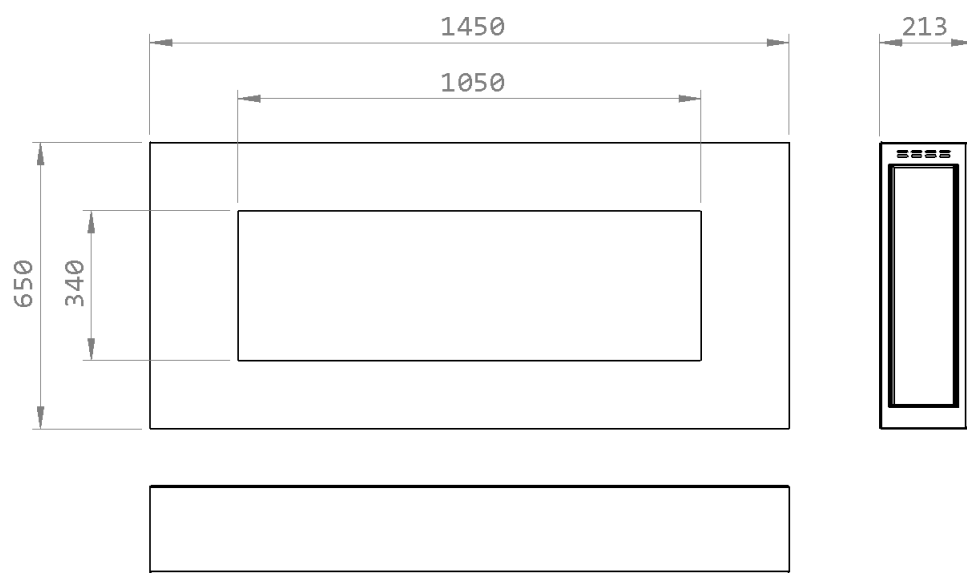

GlaammFire

Recuperadores Pachinha Lda.  
Zona Industrial da Lagoa, Lote G1  
4950 - 850 CORTES - MONÇÃO  
PORTUGAL

Tel(+351) 251 654 800  
Fax(+351) 251 654 801  
info@glammfire.com  
www.glammfire.com

*glamm*<sup>®</sup>  
fire

PT04195 - A